

SPECIFICATIONS

Environmental

Ambient operating range -	30°C to 50°C (-21 to 122°F)
Storage temperature range	-40°C to 60°C (-40 to 140°F)
Humidity	0 to 70% R.H.

ELECTRICAL

Measurement Ranges

K Type	-200°C to 1000°C
Accuracy@23°C	±0.1% of reading ±0.2°C
Characterising error	less than 0.05°C
Temperature coefficient	0.01% of reading/°C
Cold junction compensation	0.0075°C/°C
Resolution	0.1° autoranging to 1° 1000°

Note

Strong RF fields may adversely affect measurement accuracy.

General

Weight	155gms (5.47oz)
Dimensions	130 x 70 x 33 mm
Battery	PP3
Battery Life	200 Hours

Technology in Temperature



TM Electronics (UK) Limited

Mulberry House
Mulberry Lane
Goring-by-Sea
Worthing
West Sussex
BN12 4RD

TELEPHONE: +44 (0) 1903 700651

FAX: +44 (0) 1903 244307

EMAIL: sales@tmthermometers.com

www.tmthermometers.com



MM2009 Digital Handheld Thermometer




INTRODUCTION

Your high accuracy microprocessor driven thermometer is suitable for use with K type thermocouple sensors

The thermocouple calibrations are in accordance with national and international standards (NBS and IEC) tables.

Features

- PRESET TO °C
- OVERRANGE/OPENCIRCUIT PROBE INDICATION
- K THERMOCOUPLE TYPE
- HOLD FUNCTION
- TIMER FUNCTION
- LOW BATTERY INDICATION

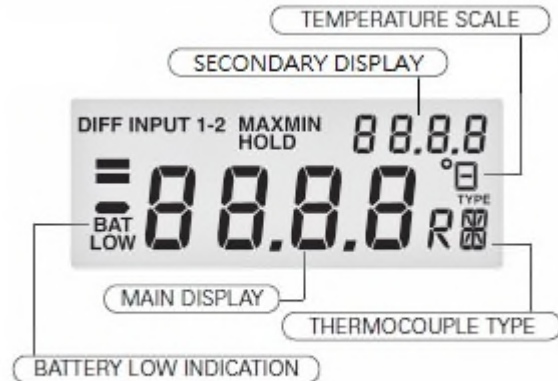

OPERATING INSTRUCTIONS

To Measure Temperature

1. Fit the battery to the instrument (refer to battery replacement details)
2. Switch thermometer ON.
3. Plug thermocouple into input socket.
4. Take measurement by contacting object with probe and reading from the display.

Using The Hold Feature

The hold feature is used to store the current value.

When you press the key the current value will transfer to the top right of the display, while the main display continues to be updated.

To cancel press the hold key again.

Using The Timer Function

The timer function is enabled by pressing and holding the hold button. After a short delay the message "ton" will be displayed in the small display. At this point release the button. The timer will then increment in 1 second intervals.

To cancel this function, press the hold button again and the message "toFF" will be shown in the small display and the timer will stop.

Replacing The Battery

The instrument will indicate 'BAT LOW' when the battery needs changing.

The battery compartment is on the rear of the instrument. Using a small screwdriver ease back the tab of the battery compartment. The compartment will then lift away.

Open Circuit Thermocouple Detection

An error in the probe is shown on the display by a series of bars '- - - -' coupled with the word 'INPUT' at the top of the display. This indicates either that the probe has an error or the temperature is out of range.